

MAINTENANCE

Main Fuse:


4. Check the two main fuses (A & B) to see if they are blown.
To replace main fuse A, pull it out of its retaining clips with the fuse remover.
To replace main fuse B, see your Honda dealer for this service.

Speed Limiter Fuse:

5. Check the speed limiter fuse to see if it's blown, see your Honda dealer for this service.

Circuit Fuses:

6. To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a bumed wire inside the fuse. If the fuse is blown, replace it with a spare fuse the same rating or lower.

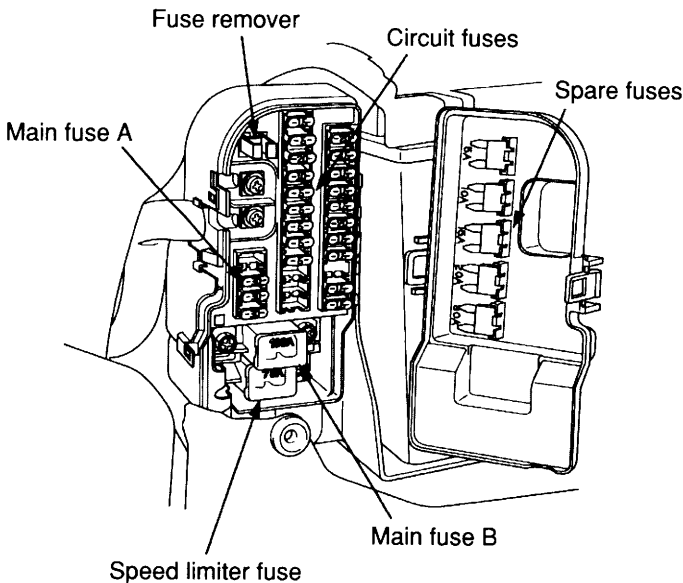

7. Close the fuse box cover.
8. Install the left side cover.