

MAJOR COMPONENTS

(Information you need to operate this motorcycle)

Each MEMO button stores only one pre-load position. Storing a new position erases the previous setting stored in that button's memory. If you want to add a new position while retaining the current one, use the other memory button.

All stored pre-load positions will be lost if your motorcycle's battery goes dead or is disconnected.

When "SUS ADJ ERROR" blinks on the display, contact your Honda dealer.

