

# MAJOR COMPONENTS

## (Information you need to operate this motorcycle)

---

### FUEL

#### Fuel Tank

The fuel tank capacity including the reserve supply is:

25 ℓ (6.6 US gal , 5.5 Imp gal)

To open the fuel fill cap, insert the ignition key and turn it clockwise to open the fuel filler lid. Turn the fuel fill cap counterclockwise to remove it.

Do not overfill the tank. There should be no fuel in the filler neck.

After refueling, be sure to tighten the fuel fill cap firmly by turning it clockwise until it clicks.

Close the fuel fill lid and turn the ignition key counterclockwise.

Remove the key from the fuel fill lid.

### WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks, and flame away.
- Refuel only outdoors.
- Wipe up spills immediately.