
ENGINE OIL

Engine Oil Level Check

Check engine oil level each day before operating the motorcycle.

To check the oil level:

1. Place the motorcycle on its center stand on firm and level ground, and remove the right engine side cover (page 136).
2. Start the engine and let it idle for 3–5 minutes.
3. Stop the engine. After 2–3 minutes, remove the oil filler cap/dipstick, wipe it clean, and reinsert the oil filler cap/dipstick without screwing it in. Remove the oil filler cap/dipstick. The oil level should be between the upper and lower level marks on the oil filler cap/dipstick.
4. If required, add the specified oil up to the upper level mark. Do not overfill.
5. Reinstall the filler cap/dipstick, and the right engine side cover.

NOTICE

Running the engine with insufficient oil can cause serious engine damage.

Oil filler cap/dipstick

