

FEATURES

(Not required for operation)

FAIRING POCKETS

The fairing pockets are for lightweight items. Do not carry more than 2.0 kg (4.5 lbs) in each fairing pocket.

To open the left fairing pocket, push the button.

To open the right fairing pocket, insert the ignition key, turn it clockwise.

To shut each fairing pocket, place your hands flat on the edges of its lid and press down until it is firmly closed.

Make sure the fairing pockets are closed before riding.

When washing your motorcycle, be careful not to flood this area with water.

Take care to keep petrol, brake fluid, or other chemical solvents off the pocket covers. They will damage the surface of the pocket covers.

Do not store valuables in the fairing pockets.

