

---

## HEADLIGHT AIM VERTICAL ADJUSTMENT


Vertical adjustment can be made by turning the headlight beam adjustment knob as necessary.

Obey local laws and regulations.

To operate, start the engine.

To lower the beam, turn headlight beam adjustment knob counterclockwise.

To raise the beam, turn the knob clockwise.

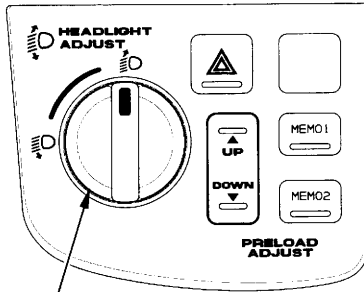

Headlight beam adjustment knob