

FEATURES

(Not required for operation)

PTY Genre Preset:

1. Check that A. SEL is not turned on. If it is on, push the A. SEL button to turn it off.
2. Select the UKW band and push the PTY button.
3. Push the select button and select the PTY group.

CH1	CH2	CH3	CH4	CH5	CH6
INFO	POP	CLASSIC	OTHER M	CULTURE	VARIED

4. When the select button which is the same as the chosen PTY group is pushed for two seconds, it becomes the establishment mode of the following PTY genre.

CH1	CH2	CH3	CH4	CH5	CH6
FINANCE	EASY MUS	CLASSICS	COUNTRY	AFFAIRS	CHILDREN
INFO	POP MUS	L. CLASS	FORK MUS	CULTURE	DRAMA
NEWS	ROCK MUS		JAZZ	DOCUMENT	LEISURE
TRAVEL			NATION M	EDUCATE	PHONE IN
WEATHER			OLDIES	RELIGION	SPORT
			OTH M	SCIENCE	VARIED
				SOCIAL A	

5. Push the select button and select the PTY genre.
6. Push the select button for two seconds, the PTY genre is set.
7. Repeat steps 3 to 6 to set the other PTY genres.