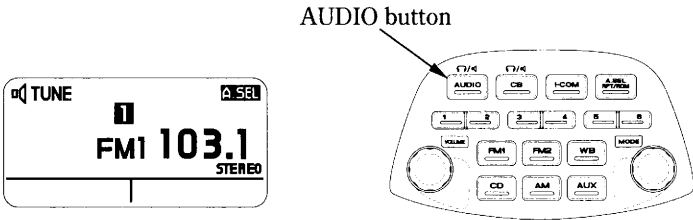

AM/FM Radio

Power Switch:

To turn the audio system on – push the AUDIO button.



To turn the audio system off – push and hold the AUDIO button until you hear a beep. The display will show the Odometer/Tripmeter only.

CB and CD are optional equipment. They are only indicated if installed.

Switch Output:

When the audio system is turned on, you can switch its output between Speaker and Headset. (Headset is optional equipment.)

- Pushing the AUDIO button switches the output.

