

FEATURES


(Not required for operation)

Auto Volume Control (AVC):

To automatically increase volume as the speed of the motorcycle increases. Push the VOLUME knob once, and “AUTO VOL SPK” will appear on the display. Then, within five seconds, change the AVC setting. When audio system output is Headset, the display will indicate “AUTO VOL HS”.

AUTO VOL SPK has four settings – HI (high), MID (middle), LO (low), and OFF.

AUTO VOL HS has three settings – HI (high), LO (low), and OFF.

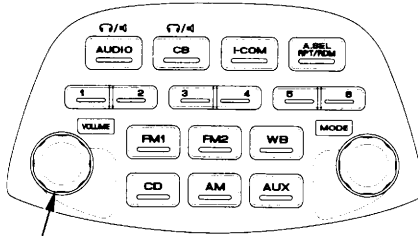

VOLUME knob

AUTO VOL SPK

MID

AUTO VOL HS

OFF