

---

## Side Cover

### Removal:

1. Grasp the cover on both sides.
2. Pull out.

### Installation:

1. Insert the top edge of the side cover under the seat.
2. Position the side cover so the four prongs on the inside of the cover are lined up above their securing slots.
3. Push the cover in place.

### **NOTICE**

Failure to use extreme care removing or installing the side covers may damage the side cover hooks.

