

MAINTENANCE

Front Lower Cover

Removal:

1. Remove the clips.
2. Remove the bolts A and bolts B.

Installation:

- Installation can be done in the reverse order of removal.

