


# MAINTENANCE

---

1. Park your motorcycle on its center stand on a firm, level surface.
2. Remove the right engine side cover (page 138 ).
3. Remove the front lower cover (page 140 ).
4. To drain the oil, remove the oil filler cap/dipstick, crankcase drain bolt, and sealing washer.
5. Remove the oil filter with a filter wrench and let the remaining oil drain out. Discard the oil filter.

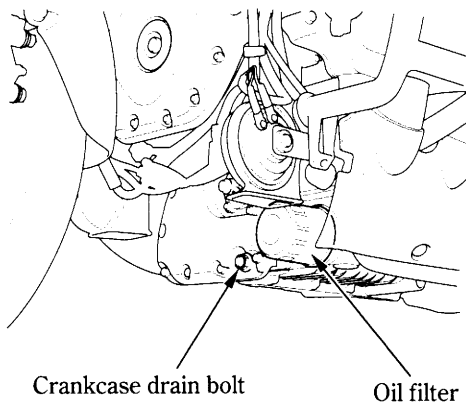

6. Apply a thin coat of engine oil to the new oil filter rubber seal.

