



PARTS LOCATION




High beam indicator (blue)

Lights when the headlight is on high beam.



Immobilizer system
(HISS) indicator
(red)

This indicator lights for a few seconds when the ignition switch is turned ON and the engine stop switch is at  (RUN). It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start (page 55).



Low fuel indicator (orange)

Lights when there is only few fuel left in the fuel tank. Amount of fuel left in the tank with the vehicle set upright is approximately;
4.4 ℓ (1.16 US gal , 0.97 Imp gal)



Fuel gauge

Shows approximate fuel supply available (page 27).



Coolant temperature gauge

Shows engine coolant temperature (page 27).

