




HEADLIGHT AIM VERTICAL ADJUSTMENT

Vertical adjustment can be made by turning the headlight beam adjustment knob as necessary.

Obey local laws and regulations.

To operate, start the engine.

To lower the beam, turn headlight beam adjustment knob clockwise. To raise the beam, turn the knob counterclockwise.

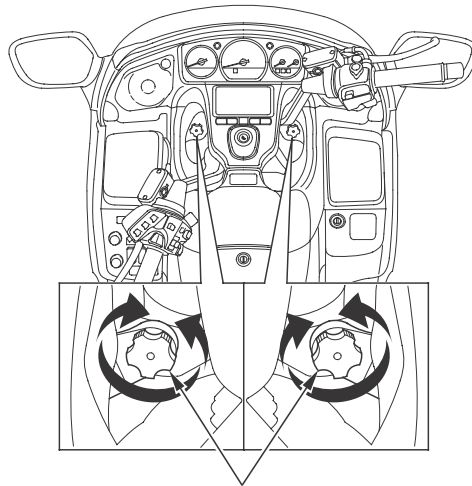

Headlight beam adjustment knob

