




MODE Knob/Button Function

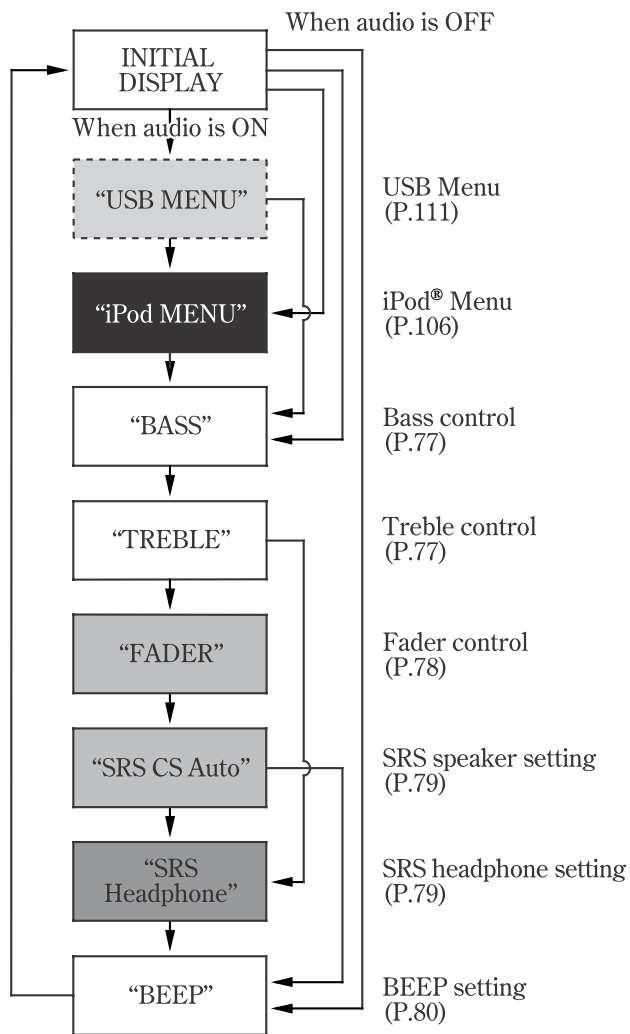

- —————> Push the MODE Knob/Button
- [Gray Box] When the speaker is used
- [Dark Gray Box] When the headset is used
- [Dashed Box] When USB flash drive is used
- [Black Box] When iPod® is used

