




# FEATURES

## (Not required for operation)

---

### Beep set

- To use the circuit ————— push the MODE knob/button until “BEEP” is displayed (page 71 ). Then, within 5 seconds, change the beep setting.
- To change the setting ——— turn the MODE knob/button. (ON or OFF)

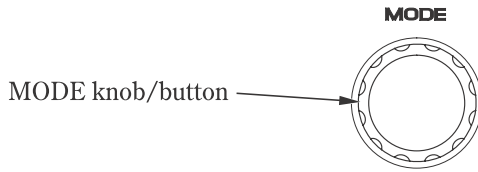

**BEEP**

**OFF**

