



## MAINTENANCE

---

### Cylinder Head Side Cover

#### Removal:

1. Remove the rubber plugs.
2. Remove the bolts.

#### Installation:

- Installation can be done in the reverse order of removal.

