



Shutting Off the Engine

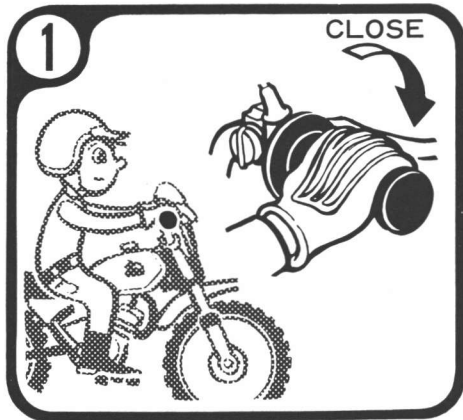

Close the throttle.

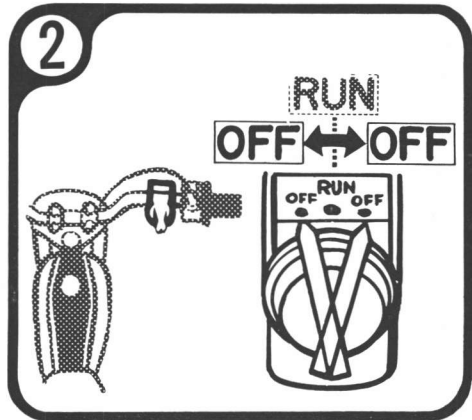

Move the ignition switch to the "OFF" position.