

Throttle Grip Adjustment


As shown in the figure, the normal free play of the throttle grip ① is **0.2 in. (5 mm)** on the external circumference of the grip.

To adjust, proceed as follows:


1. Remove the rubber cap ② from the throttle cable adjuster ③.
2. Turn the throttle cable adjuster in

direction ① to increase the free play and in direction ② to decrease the free play.

3. After adjusting, twist the throttle grip inward and outward to check for smooth operation.

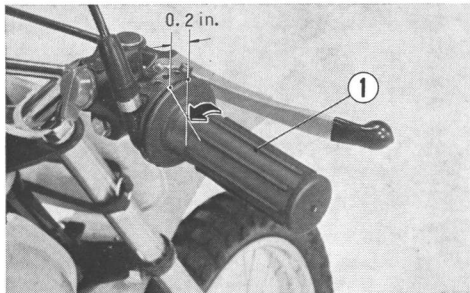

① Throttle grip

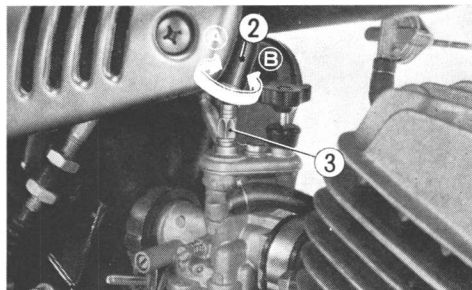

② Rubber cap

③ Throttle cable adjuster