


## Seat Lock and Helmet Holder

The seat lock ① is located on the lower left side of the seat. Insert the main switch key, and turn it counterclockwise 90° to unlock and open the seat.


The helmet holder ② is located under the seat. Open the seat, hang the "D" ring of the helmet on the hook, and lock the seat.

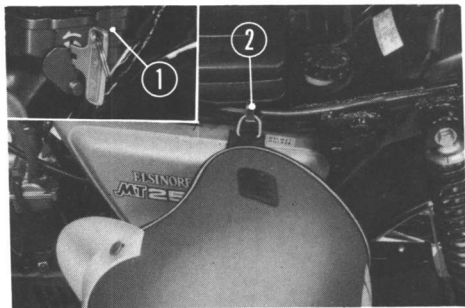

① Seat lock      ② Helmet holder

## Steering Lock

The steering lock ① is located on the steering stem directly below the headlight case. Turn the handlebar all the way to the steering stop, either to the left or right, insert the key into the lock, turn the key 60° to the left and press in, turn the key back to the original position and remove the key. This locks the steering to help prevent theft.

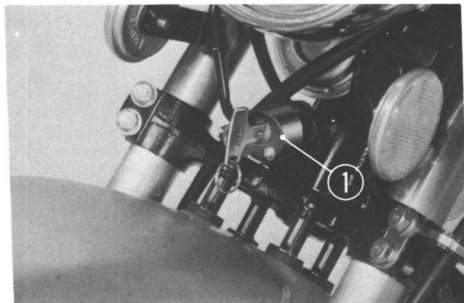

① Steering lock