


4. Remove the cotter pin ④ from rear axle nut.
5. Remove the rear axle nut ⑤, and pull out the rear axle ③ (see page 57), and then the rear wheel can be removed.
6. To install the rear wheel, follow the reverse of removal procedure outlined in steps 1 through 5.

NOTE:

Always use a new cotter pin to retain the rear axle nut.

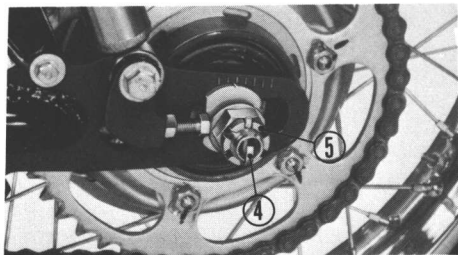


④ Cotter pin ⑤ Rear axle nut

Battery Maintenance

Battery Electrolyte Replenishment:

The battery is located inside the left side cover.

Remove the left side cover. Remove the two battery stay bolts ①, with the furnished wrench in the tool kit, and loosen the stay ②, and pull the battery stay to the out side of the frame. Remove the battery, and check the electrolyte level. The electrolyte level must be maintained between the upper ④ and lower level ⑤

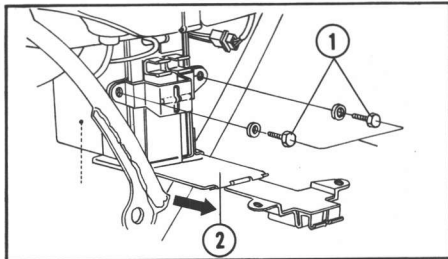

① Stay bolts ② Battery stay