


### Cylinder Head, Cylinder and Piston :


1. Remove the spark plug and cylinder head nuts and remove the cylinder head.
2. Decarbonize the combustion chamber walls and piston crown using a scraper of soft material. Take care not to score or scratch the surfaces. Ensure that debris does not enter ports.
3. To assemble, reverse the disassembly procedures.

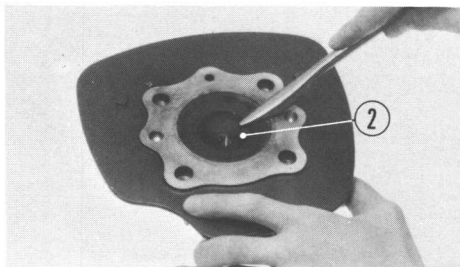

② Combustion chamber

Cylinder head tightening torque is as follows.

- 8 mm flange nut :  
14.5-18.1 lbs-ft (2.0-2.5 kg-m)
- 6 mm flange nut :  
7.2-9.4 lbs-ft (1.0-1.3 kg-m)

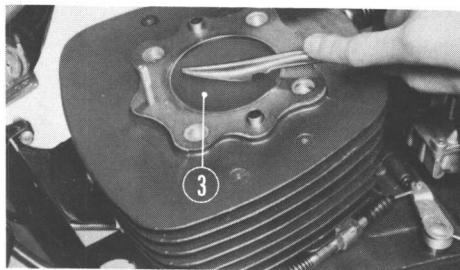

③ Piston crown