
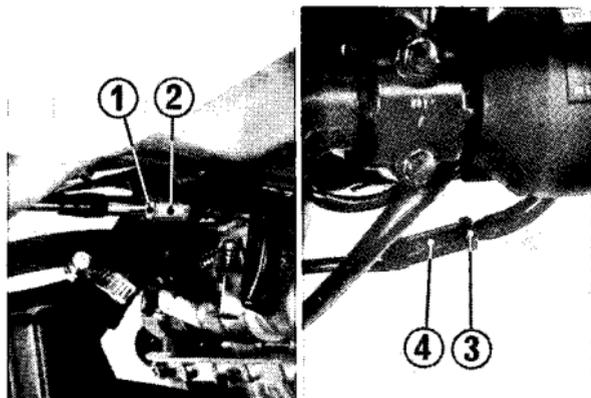


## Throttle Operation

1. Check for smooth rotation of the throttle grip from the fully open to the fully closed position at both full steering positions.
2. Check the throttle grip free play at the grip. Standard free play should be approx. 2—6 mm of the grip rotation. To adjust the play, loosen the lock nut [(1), (3)] and turn the adjuster [(2), (4)].

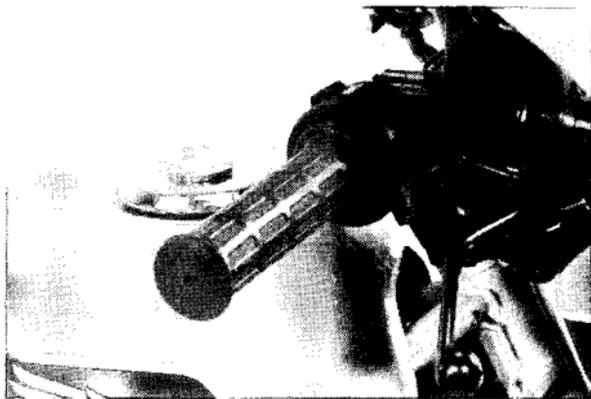

(1) Lock nut  
(2) Upper adjuster

(3) Lock nut  
(4) Lower adjuster