

5. Tighten both lock nuts (2).
6. Tighten the axle nut. Torque the axle nut to 7.0—10.0 kg-m (51—72 ft-lb).

CAUTION:

- * *The drive chain on this motorcycle is equipped with small O-rings between the link plates. These O-rings retain grease inside the chain to improve its service life. However, special precautions must be taken when adjusting, lubricating, washing and replacing the chain.*

Wear inspection:

Check the chain wear label when adjusting the chain. If the red zone on the label aligns with the arrow on the chain adjuster after the chain has been adjusted to 15—25 mm (5/8—1 in) slack, the chain is excessively worn and must be replaced.

CAUTION:

- * *Excessive chain slack, 50 mm (2 in) or more, may damage the bottom part of the frame.*

