

## RIGHT HANDLEBAR CONTROLS

### Headlight switch

	Headlight, position light, taillight and meter lights ON.
	Position light, taillight and meter lights ON.
•	All lights OFF


### Starter button



The starter button (2) is below the headlights switch (1).

When the button is pressed, the starter motor cranks the engine.

See page 53 for how to start up.

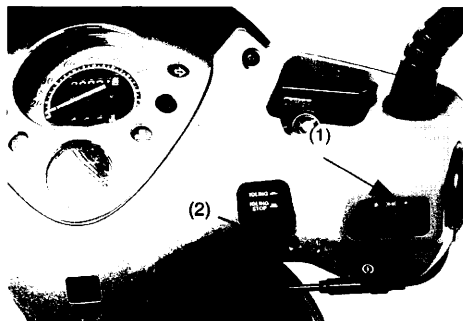

(1) Headlights switch

(2) Starter button