
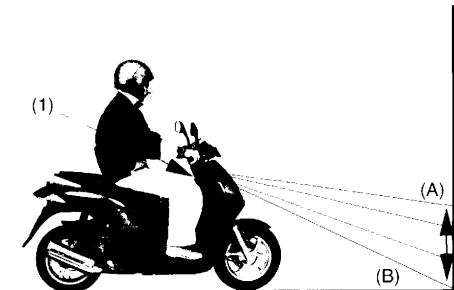


HEADLIGHT VERTICAL ADJUSTMENT

The vertical adjustment can be carried out by turning the screw (1) through the hole in the document compartment. Only the height can be adjusted.

Follow local laws and regulations.

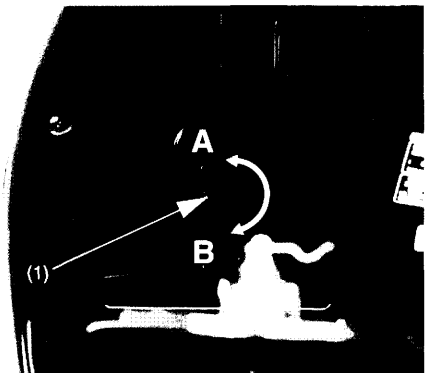

NOTE:

- Adjust the height of the light beam in compliance with local driving standards.

- (1) Adjustment screw
- (A) Up
- (B) Down