

SPARK PLUG


(See "Maintenance precautions" on page. 75).

Recommended spark plugs:


Standard:	BR8ES (NGK) W24ESR-U (DENSO)
High speed riding	BR9ES (NGK) W27ESR-U (DENSO)

NOTE:

- Be careful not to damage the scooter parts when carrying out maintenance on the spark plug.

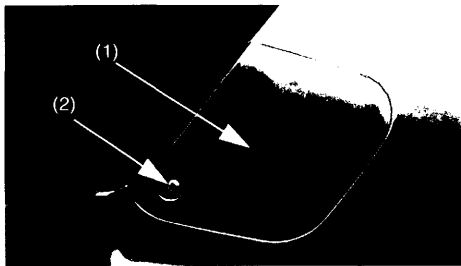

1. Remove the maintenance cover (1) remove the screws (2).
2. Disconnect the spark plug cap from the spark plug (3).
3. Clean any dirt from around the spark plug base. Remove the spark plug using the spark plug wrench in the tool kit.
4. Throw away the used spark plug

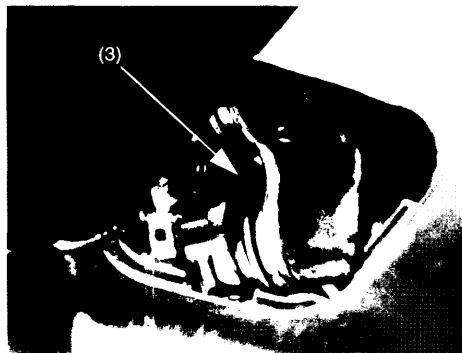

- (1) Maintenance lid
- (2) Screw
- (3) Spark plug cap