

TRANSPORTING

⚠ WARNING

- To prevent fire or explosions while transporting the scooter, always:
- Drain the fuel tank and carburetor.
- Carry the motorcycle upright in its normal riding position to prevent oil from leaking out.

Draining the fuel

Always carry out this operation in a well ventilated area.

⚠ WARNING

- **Petrol is extremely flammable and explosive in certain conditions. Carry out this operation in a well ventilated are with the engine off. Do not smoke or allow flames or sparks in the area where fuel is being drained or refilled, or where fuel is stored.**
1. Stop the engine.
 2. Empty the fuel tank using a commercially available hand siphon or other equivalent method.
 3. Place the free end of the carburetor drainage pipe in a suitable container.
 4. Open the carburetor breather pipe turning the drainage screw counter clockwise. Once the fuel is all drained out, turn the screw clockwise until it is tightened.