

**▲ WARNING**


- \* Do not pry the clips open to get a fuse out; you could bend them and cause poor contact with the new fuse. A loose fuse could cause damage to the electrical system and even start a fire.

To replace the fuse, open the fuse holder and lift out the fuse with the clips. Slide the old fuse out of the clips and discard it. Slide the clips onto the ends of the new fuse, push them back into the fuse holder, and close the fuse holder.

**CAUTION:**

- \* After replacing the fuse, be sure to return the fuse holder to its original location.

**REMOVAL**

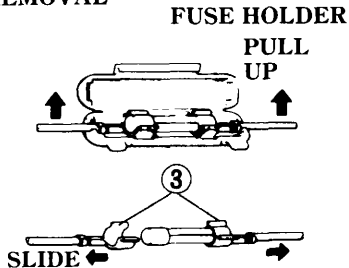

(3) clips

**INSTALLATION**

