

Maintenance Schedule

slubert

Maintenance

Items	Frequency	Odometer Reading*1					Refer to page	
		× 1,000 mi	0.6	2.5	5	7.5		
		× 1,000 km	1.0	4	8	12		
Fuel Line	🔧					I	-	
Throttle Operation	🔧			I	I	I	71	
Air Cleaner*2						R	51, 63	
Crankcase Breather*3				C	C	C	72	
Spark Plug						R	56	
Valve Clearance	🔧	Every 15,000 mi (24,000 km): I						-
Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 2,500 mi (4,000 km) or 6 months: R						59
Engine Oil Strainer Screen	🔧						C	59
Engine Idle Speed	🔧		I	I	I	I	62	
Radiator Coolant*4							64	
Cooling System	🔧					I	-	
Secondary Air Supply System	🔧					I	-	

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 99).
- 🔧 : Technical. In the interest of safety, have your scooter serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- C : Clean