


Removing & Installing Body Components

Inner Cover

The inner cover must be removed to service the fuse and battery.

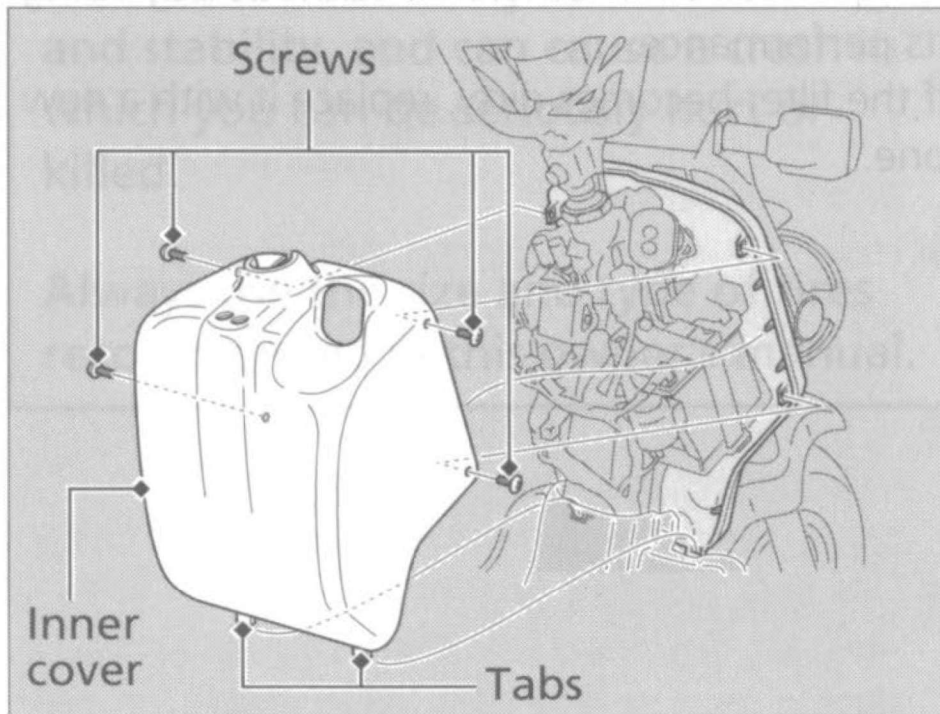

Removal

1. Remove the screws.
2. Release the tabs, then remove the inner cover.

Installation

Install the parts in the reverse order of removal.