

## Other Adjustments

### Adjusting the Headlight Aim

You can adjust vertical aim of the headlights for proper alignment by moving the headlight guard. To move the headlight guard, loosen the bolts.

Tighten the bolts after adjustment. Obey local laws and regulations.

