

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 75
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 76
<b>Tire Puncture</b> .....	P. 77

<b>Electrical Trouble</b> .....	P. 78
Battery Goes Dead .....	P. 78
Burned-out Light Bulb .....	P. 78
Blown Fuse .....	P. 81