

If the indicator lights while the engine is running, stop the motorcycle in a safe place immediately, and check the engine oil level (page 40).

If the indicator stays on even if the engine oil level is not low or after more engine oil is added, contact your Honda dealer as soon as possible.

- Make sure that the motorcycle is standing upright on firm level ground when you turn ON the ignition switch. If the motorcycle is on an incline, the indicator stays on after starting the engine.

NOTICE

Running the engine with insufficient oil level or oil pressure may cause serious damage to the engine and transmission.