

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
		NOTE	MONTH								
• FUEL LINE						I		I		I	—
• THROTTLE OPERATION						I		I		I	129
AIR CLEANER		NOTE (2)						R		R	131
CRANKCASE BREATHER		NOTE (3)				C	C	C	C	C	123
SPARK PLUGS						EVERY 24,000 km (16,000 mi) I, EVERY 48,000 km (32,000 mi) R					124
• VALVE CLEARANCE						I		I		I	—
ENGINE OIL						R		R		R	117
ENGINE OIL FILTER (CARTRIDGE)						R		R		R	119
HFT OIL FILTER (ELEMENT)						R		R		R	119
RADIATOR COOLANT		NOTE (4)						I		I	130
• COOLING SYSTEM								I		I	—
• SECONDARY AIR SUPPLY SYSTEM								I		I	—