


3. Raising the motorcycle onto the stand as follows:

- ① While holding the handlebars, support the motorcycle upright and retract the side stand.
- ② Have an assistant check that the attaching bolt is tightened securely and is aligned with the rear axle nut properly. If necessary, reinstall the maintenance stand.
- ③ Have the assistant rest his right foot on the maintenance stand and his hands on the rear of the rear cowl.
- ④ Pull the motorcycle backward while simultaneously, letting the assistant shift his weight onto the maintenance stand.

### CAUTION :

- **Do not pull up on the rear cowl during this operation.**

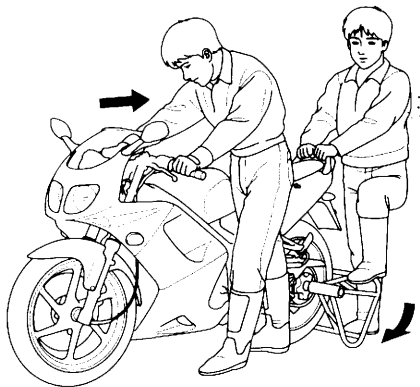

### To remove :

1. Retract the side stand.
2. Hold the handlebars and push the motorcycle forward.
3. Lower the side stand and support the motorcycle on it.
4. Remove the maintenance stand.