

OIL CHANGE


Transmission oil quality is the chief factor affecting engine service life. Change the transmission oil when specified by the maintenance schedule.

NOTE :

- Change transmission oil with the engine at normal operating temperature and the motorcycle with upright position to assure complete and rapid draining.
1. Start the engine and let it idle for a few minutes.
 2. Stop the engine, place an oil drain pan under the crankcase. Remove the oil filler cap (1) and drain plug (2).

⚠ WARNING

- **A warmed-up engine and the oil in it are hot; be careful not to burn yourself.**
3. With the ignition switch OFF, operate the kickstarter several times to drain any oil which may be left in the engine.

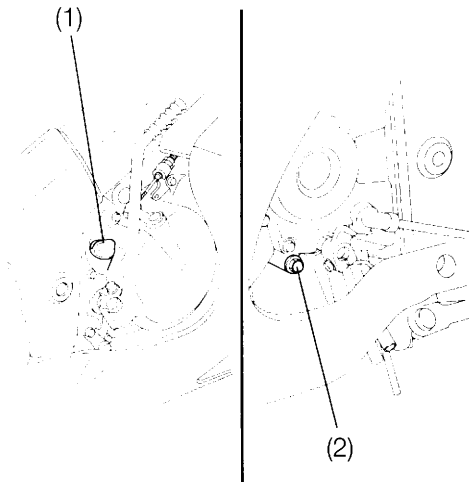

(1) Oil filler cap

(2) Drain plug