


Rear Wheel Removal

1. Place the motorcycle on its side stand.
2. With the rear wheel on the ground, loosen the wheel nuts (1) while applying the rear brake.
3. Raise the rear wheel off the ground with the maintenance stand (page 59).
4. Remove the wheel nuts.
5. Remove the rear wheel (2).

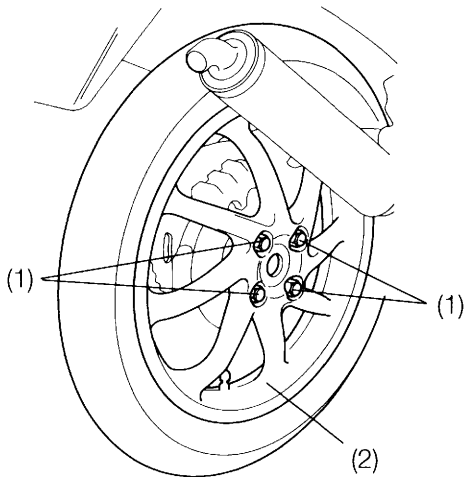

- (1) Wheel nuts
(2) Rear wheel