

(Ref.No.) Description	Function
(15) PGM-FI malfunction indicator lamp (MIL) (red)	<p>Flashes when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at ○ (RUN).</p> <p>If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.</p>
(16) Honda smart card key indicator (orange)	<p>Push the ignition switch. When the ID is authenticated, the Honda smart card key indicator lights. When you turn the ignition switch ON, the Honda smart card key indicator will go off in 2 seconds when the engine stop switch is at ○ (RUN) (page 60).</p> <p>When the battery is low, the Honda smart card key indicator flashes 5 times when you turn the ignition switch ON (page 61).</p> <p>Flashes when the Honda smart card key has operating problems (page 61).</p>