


(Ref.No.) Description	Function
(1) Fuel gauge	Shows approximate fuel supply available (page 39). The fuel gauge needle will swing to the maximum scale on the dial once when the ignition switch is turned ON.
(2) Left turn signal indicator (green)	Flashes when the left turn signal operates.
(3) Speedometer	Shows riding speed. The speedometer needle will swing to the maximum scale on the dial once when the ignition switch is turned ON.
(4) PGM-FI malfunction indicator lamp (MIL) (amber)	Flashes when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at  (RUN). If it comes on at any other time, reduce speed and take the scooter to your Honda dealer as soon as possible.