

| (Ref.No.) Description | Function |
|---|--|
| (18) Mode button | The button is used to select the odometer or the tripmeter A or B (page 31), to adjust the time (page 32). |
| (19) Anti-lock Brake System (ABS) indicator (red) (NSS250A) | This light normally comes on when the ignition is turned ON, and goes off after you ride the scooter at speed above 10 km/h (6 mph). If there is a problem with the Anti-lock Brake System, this light comes on and remains on (page 43). |