

## Oil Change Indicator


The oil change indicator (1) lights when the mileage on your scooter approaches the oil change interval specified on the maintenance schedule.

The oil change indicator lights when the odometer shows the first interval (1,000 km) or every 6,000 km after resetting the oil change indicator.

If the oil is changed before the oil change indicator appears, be sure to reset the oil change indicator after changing the oil. The indicator will appear for 2 seconds, then disappear. This means the indicator is reset.

Reset the indicator after each oil change. Press and hold the RESET button (2), then turn ON the ignition switch. Keep the RESET button pressed for 3 seconds. The oil change indicator will go off.

The oil change indicator should also light for a few seconds and then go off when the ignition switch is turned ON.

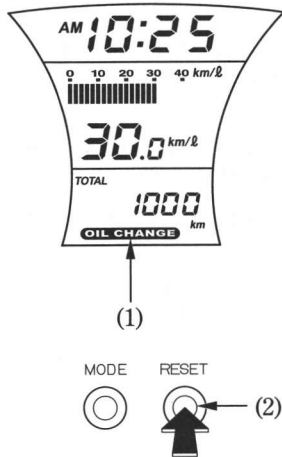

- (1) Oil change indicator
- (2) Reset button