


## Coolant Temperature Gauge

The coolant temperature gauge (1) shows coolant temperature.

When the needle begins to move above the C (Cold) mark (2), the engine is warm enough for the scooter to be ridden. The normal operating temperature range is under the H (Hot) mark range (3). If the needle reaches the H (Hot) mark range, stop the engine and check the reserve tank coolant level. Read pages 46 – 47 and do not ride the scooter until the problem has been corrected.

### NOTICE

Exceeding maximum running temperature may cause serious engine damage.

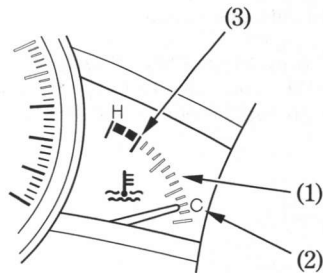

- (1) Coolant temperature gauge
- (2) C (Cold) mark
- (3) H (Hot) mark range