

The Honda smart card key contains electronic circuits that are activated by the Honda smart card key system. If the circuits are damaged, the card key will not start the engine, release the ignition switch or open the front seat, left console box or fuel lid.

- Do not drop the card keys or set heavy objects on them.
- Protect the card key from direct sunlight, high temperature, and high humidity.
- Do not scratch or puncture.
- Do not store near any magnetized products such as a magnetized key chain.
- Always keep the card key away from electric appliances such as a TV, radio, PC or low-frequency massage device.
- Keep the card key away from liquids. If it gets wet, dry them immediately with a soft cloth.
- Do not burn.
- Do not wash in the ultrasonic cleaner.

- If fuel, wax, or grease adhere to the card key, wipe it off immediately to avoid cracking or warping.
- Do not disassemble the card key other than when changing a battery or to check the ID number. Only the cover of the card key can be disassembled. Do not disassemble other parts.