



4. Press the seat lock release button twice and press the ignition switch once. This operation indicates "2".

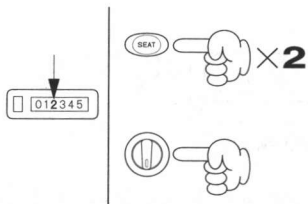

5. Press the seat lock release button 3 times and press the ignition switch once. This operation indicates "3".

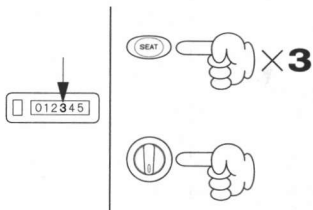

6. Input the remaining numbers by following the procedure mentioned above. Unlock the ignition switch when the ID number is checked through. You can start the engine.

- When unlocking in ID number input mode, you can turn the ignition switch only one time.

7. Be sure to remove the EM connector and return the dummy connector.