


IGNITION SWITCH

Operate the ignition switch (1) to activate the switch and the intermittence of electric circuit.

The headlight, position light, taillight and license light will come on whenever you turn the ignition switch ON. If your scooter is stopped with the ignition switch ON and the engine is not running, the headlight, position light, taillight and license light will still be on, resulting in battery discharge.

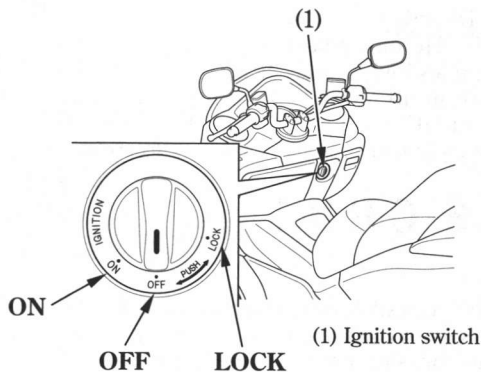

(1) Ignition switch

Ignition Switch Position	Function
LOCK (steering lock)	Steering is locked. Engine and lights cannot be operated.
OFF	Engine and lights cannot be operated.
ON	Engine and lights can be operated.