


RIGHT HANDLEBAR CONTROLS

Engine Stop Switch

The engine stop switch (1) is next to the throttle grip. When the switch is in the

○ (RUN) position, the engine will operate. When the switch is in the ☒ (OFF) position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the ○ (RUN) position.

If your scooter is stopped with the ignition switch ON and the engine stop switch ☒ (OFF), the headlight, position light, taillight, and license light will still be on, resulting in battery discharge.

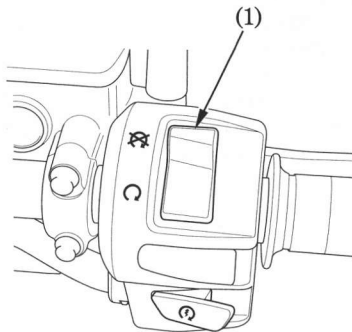

(1) Engine stop switch