
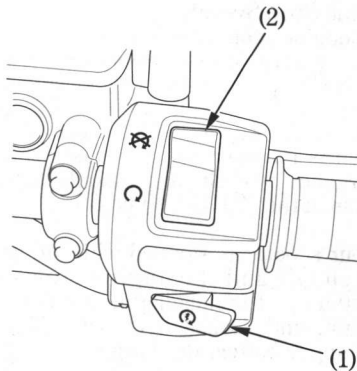


Start Button

The start button (1) is below the engine stop switch (2).

When the start button is pressed, the starter motor cranks the engine. If the engine stop switch is in the  (OFF) position, the starter motor will not operate. See page 117 for the starting procedure.



- (1) Start button
- (2) Engine stop switch