

Shift Switch (5) (NSS250A)

When the Automatic Shift Mode is selected:
Press the shift switch to select the D mode or S mode.

When the 7-speed Automatic Mode is selected:

Press the shift switch to select the 7-speed Manual Mode.

When the 7-speed Manual Mode is selected:


Press the shift switch to shift the gear between 1st and 7th.

Shift switch (+) (6):

- Automatic shift mode: select the D mode.
- 7-speed automatic mode: select the 7-speed manual mode.
- 7-speed manual mode: shift up.

Shift switch (-) (7):

- Automatic shift mode: select the S mode.
- 7-speed automatic mode: select the 7-speed manual mode.
- 7-speed manual mode: shift down.

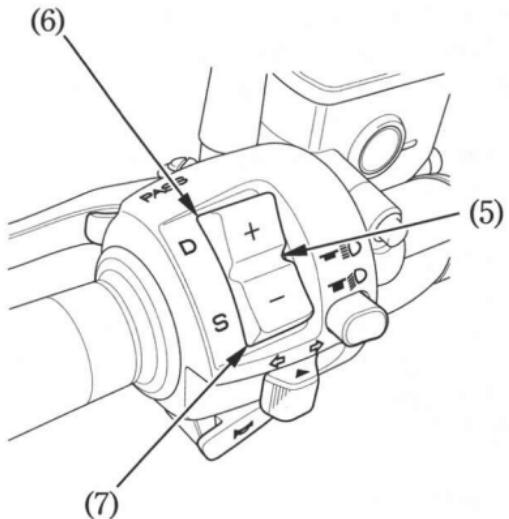

(5) Shift switch

(6) Shift switch (+)

(7) Shift switch (-)