

Switching D Mode and S Mode When the Automatic Shift Mode Is Selected


Press the shift switch (1) to change the D mode and the S mode while the automatic shift mode is selected.

Switching D mode to S mode:

Press the shift switch (-) (2) to switch to S mode and the S mode indicator (3) lights.

Switching S mode to D mode:

Press the shift switch (+) (4) to switch to D mode and the D mode indicator (5) lights.

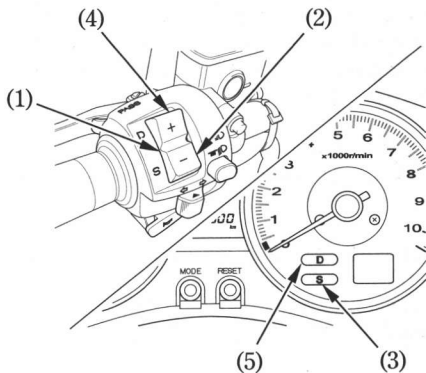

- (1) Shift switch
- (2) Shift switch (-)
- (3) S mode indicator

- (4) Shift switch (+)
- (5) D mode indicator